


**DO NOT DISCARD. DELIVER TO MANUFACTURING
NO DESECHE. ENTREGA A LA FABRICACION.
INSTRUCTIONS DE MONTAGE. NE PAS JETER.
BITTE NICHT WEG WERFEN. BITTE AN DIE PRODUKTION WEITERLEITEN**

*HyperGrip™ Panel Receptacle - UNshielded
Installation Instructions*


1. Termination Instructions

CRIMP

Strip .118 in. (3mm)

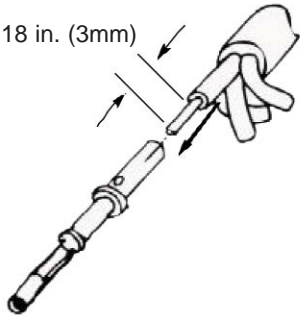

- Strip wire
- Insert into crimp barrel

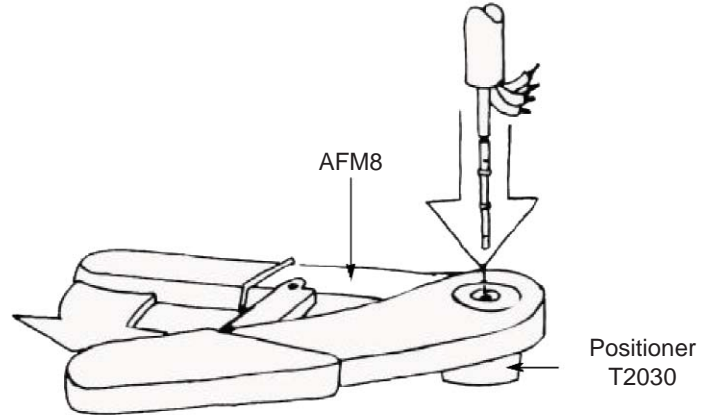


- Insert contact into positioner as shown
- Crimp


OR

SOLDER

Strip .098 IN. (2.5MM)

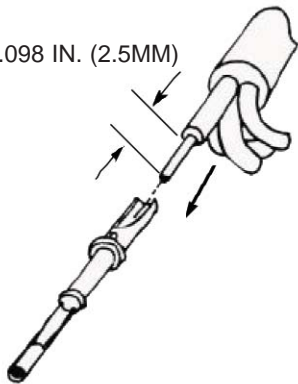


- Strip wire
- Insert into solder cup

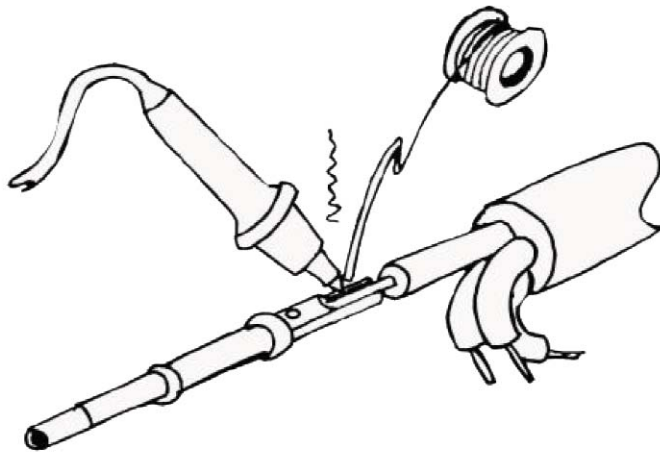


- Solder wire into solder cup

2.

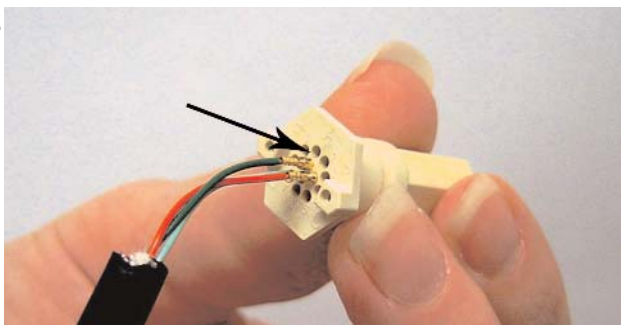


Insert contacts


3.

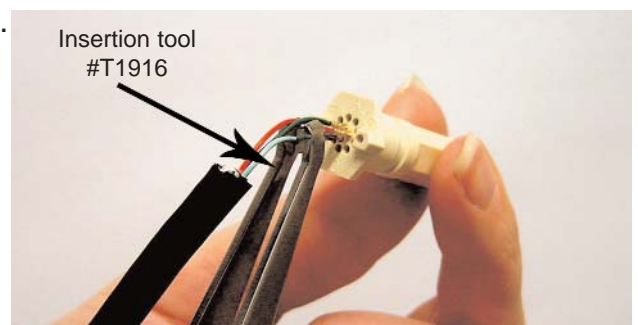


Push in to the stop

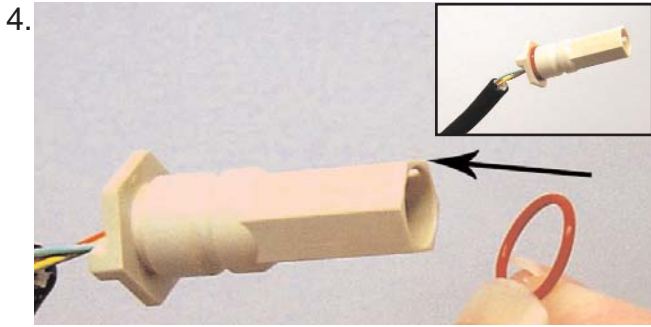

Install O-ring

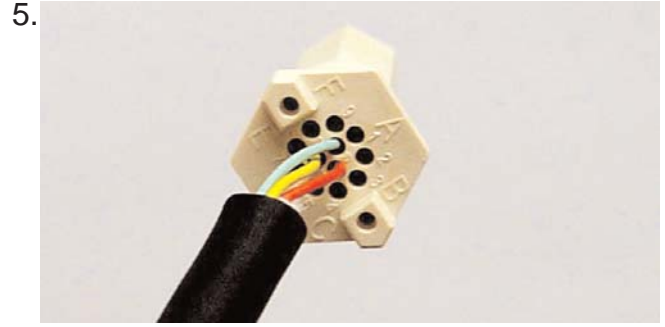

FRONT INSTALL

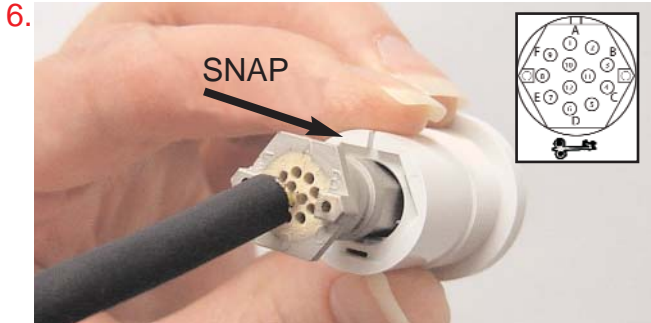

Key the connector - choose A, B, C, D, E, or F and "Snap" in place



Install color coded panel seal (optional)




Color ring installed



Install nut


REAR INSTALL

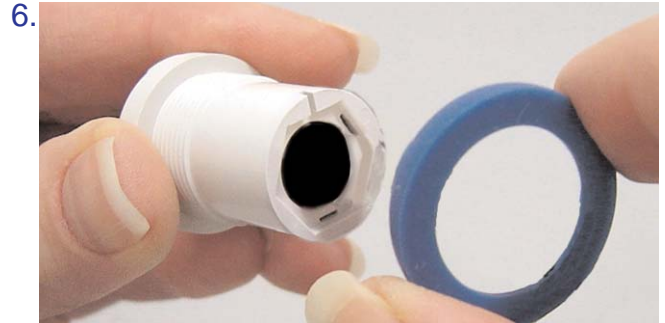

Install color coded panel seal (optional)



Install nut

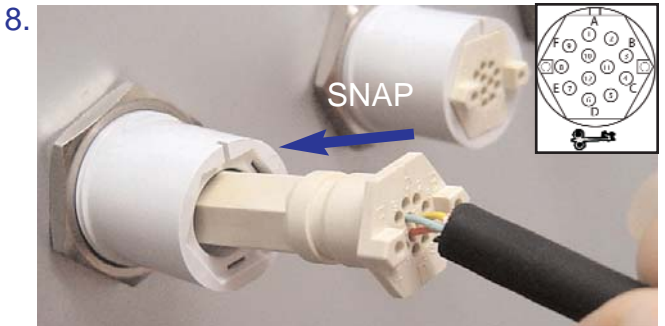

Key the connector - choose A, B, C, D, E, or F and "Snap" in place